Elevations Towards West

Building Type L1 West-Facing Elevations

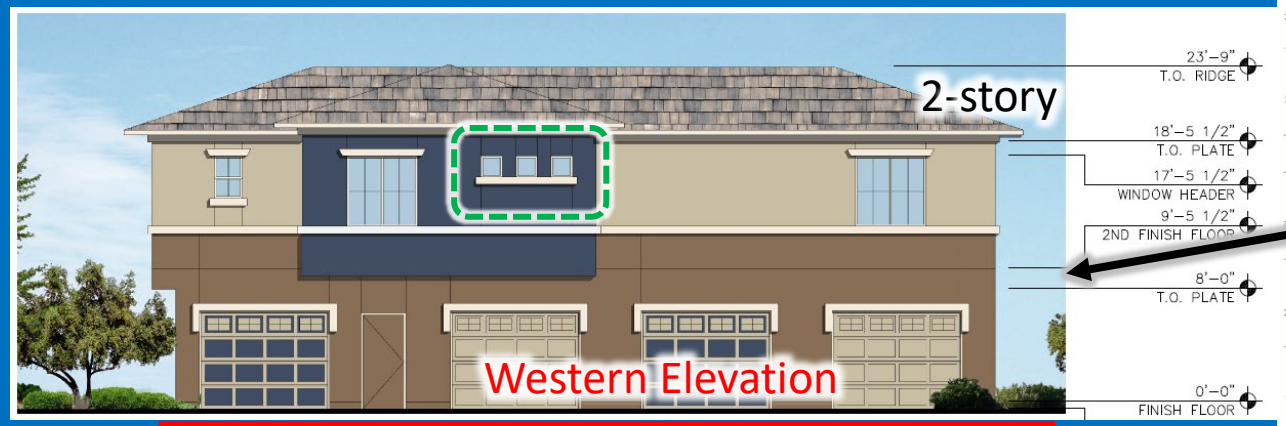

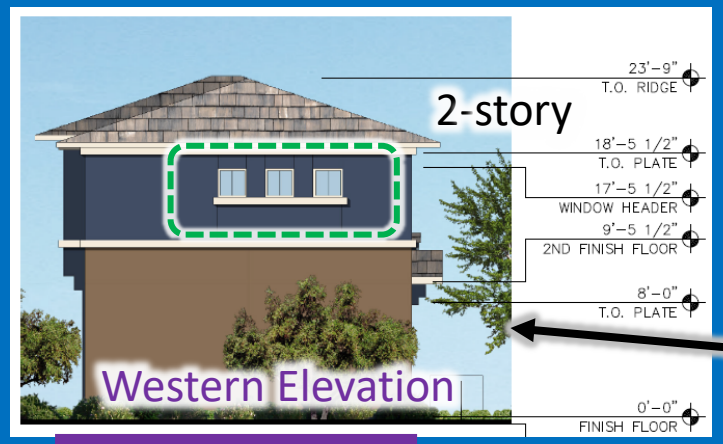

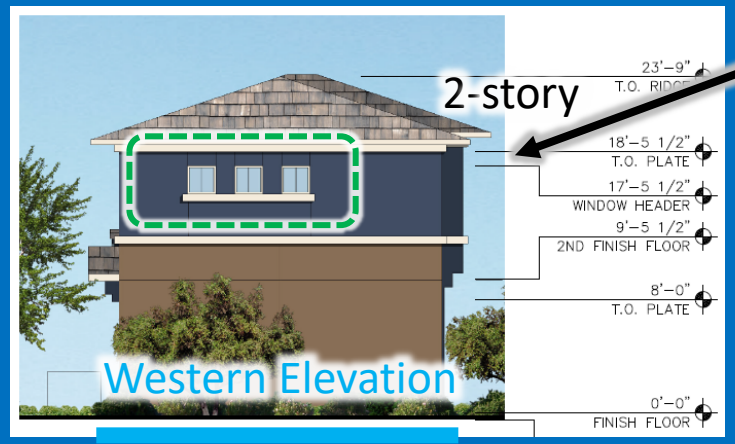

Clerestory Windows

Clerestory (pronounced "clear story") windows are positioned high on a wall to allow light to enter a large building while retaining privacy.

Where possible, these have been incorporated into the western facing elevations to minimize views to the west.

On the west elevations, the 3-story building elements are behind the 2-story building elements and clerestory windows have been used on 3-story elements.

Western Elevation

Building Type 15.1 West-Face Elevations

On the west elevation, the 3-story building element is behind 2-story building element and clerestory windows have been used on the 3-story element.

Western Elevation

Building Type 1.1 Elevations

On northwest-facing elevation, the 3-story building element is behind the 2-story building element and clerestory windows have been used on 3-story element.

On the west elevation, the 3-story building element is behind the 2-story building element and clerestory windows have been used on 3-story element.

North Elevation

Building Type 1.1 Elevations